

AntMiner-U1 user guide

1 Install driver

Cgminer for antminer-U1:

<https://github.com/AntMiner/AntGen1/tree/master/cgminer>

CP2102 Driver:

<http://www.silabs.com/products/mcu/Pages/USBtoUARTBridgeVCPDrivers.aspx>


zadig:

<http://zadig.akeo.ie/>

Step1: install CP210x_VCP driver.


Step2: Plug in antminer-U1.

Step3: Open Zadig and click "Options -> List All Devices"

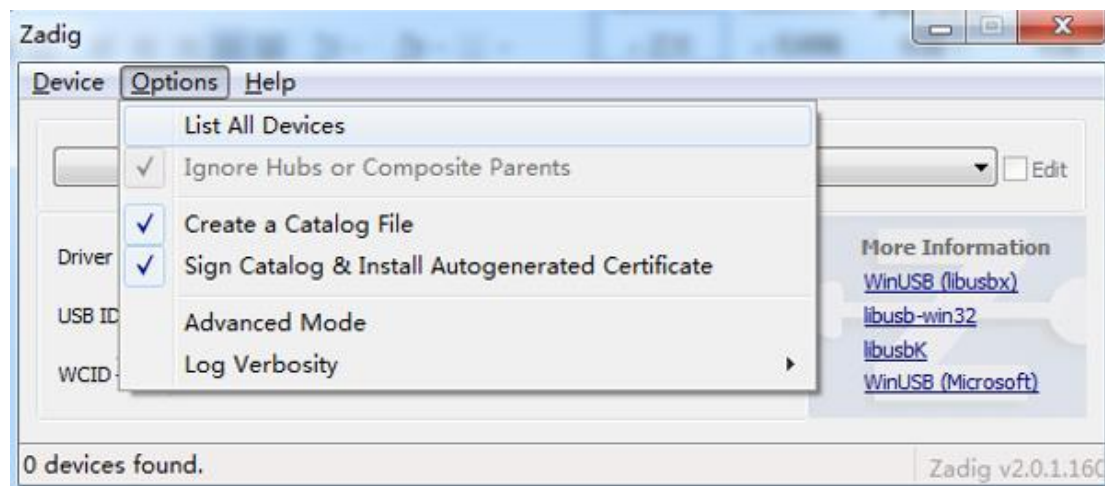

Step4: Select CP2102 USB to UART Bridge Controller, and then click "Reinstall

Driver"

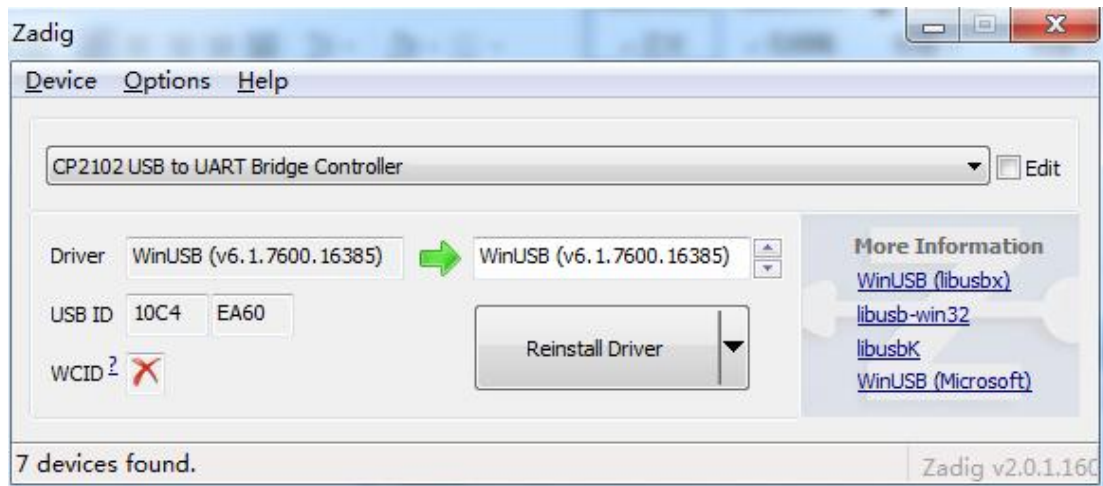

Step5: run cgminer. In next time, please run cgminer directly.

```
cgminer.exe --bmsc-options 115200:20 -o 50.31.149.57:3333 -u ktzhan_3 -p 123 --  
bmsc-freq 0781
```

